

M/s. Milestone Gears Pvt. Ltd.,
Unit - 4, Opp. Himachal Fibers Ltd.
Ind. Area., Barotiwala, Distt. -
Solani (HP)

Standard Operating Procedure

OPN. NO. 200

पिछला आपरेशन
अगला आपरेशन

Gear Chamfering
Gear Rolling

MACHINE NO.
REVISION NO.

Lab.
00

PART NAME/
Number
151 375 8

CUST. NAME
MATERIAL

TMTL
20MnCr5

OPERATION
CHD. BY:

200

APRD. BY:

DATE OF ENACTMENT

25/02/14

INSPECTION INSTRUMENTS DETAIL :

ROCKER Well Tester, Vicker H. Tester, Microscope

FIXTURE NUMBER :

TOOLS / CUTTERS DETAIL :

S.NO. MACHINE / EQUIPMENT PARAMETERS

VALUE

LOCATE

CLAMP

REST

INSPECT

MAJOR

MINOR

CRITICAL

1.

2.

3.

S.NO. JIG / FIX. / CTG. TOOL PARAMETERS

VALUE

1.

2.

3.

CONTROLLING OF DIEMENSION

S. No

Dimension

Specifications

Instrument

Operator

Inspector

100%

100%

1.

2.

3.

4.

5.


Core

Microscope

WORKING INSTRUCTIONS

Mettallurgical Testing के लिये नीचे लिखे Instruction को Follow करें :-

- 1) Rockwell Hardness Tester में Component की Surface Hardness चैक करें।
- 2) Component को काट कर एक सैम्पल चैक करें।
- 3) Rockwell/Vickers Hardness Tester में Sample की Core Hardness चैक करें।
- 4) Vickers Hardness Tester में Sample की ECD चैक करें।
- 5) Nital से Sample को Etching करें।
- 6) Etching किये हुये Sample का Case & Core में Microstructure Microscope द्वारा चैक करें।

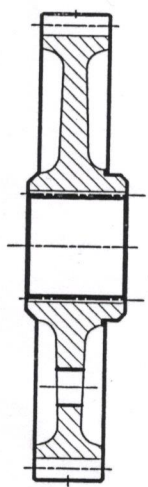

NOTE:-

मशीन चलाने से पहले आयेटर पिछला आपरेशन चैक करेगा।
पिछला आपरेशन होने के बाद ही अगला आपरेशन करेगा।

CONTROLLED COPY
SR NO. 01
ISSUED TO U-7
DATE 11/04/25

DO & DON'T S.

- 1 सभी Instrument साफ सुथरे होने चाहिये।
- 2 सभी Instrument का Leveling सही होना चाहिये।
- 3 सभी Instrument Calibrate होने चाहिये।

ENG. CHANGES.

A.

B.

C.

D.